WRP 0HP
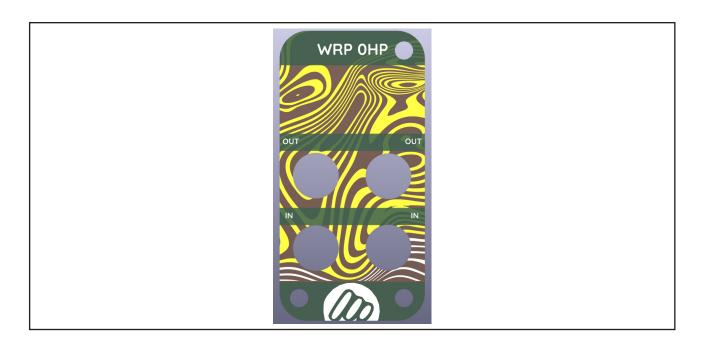## Sound generator

- IN : feed it with a gate, cv and even audio to activate the WARP generators.
- OUT : both outputs will be different and will produce weird sounds and noises.

For systems with only banana jacks you will need to connect the module to ground via the BROWN banana on the side.

mangoest